


Template for:

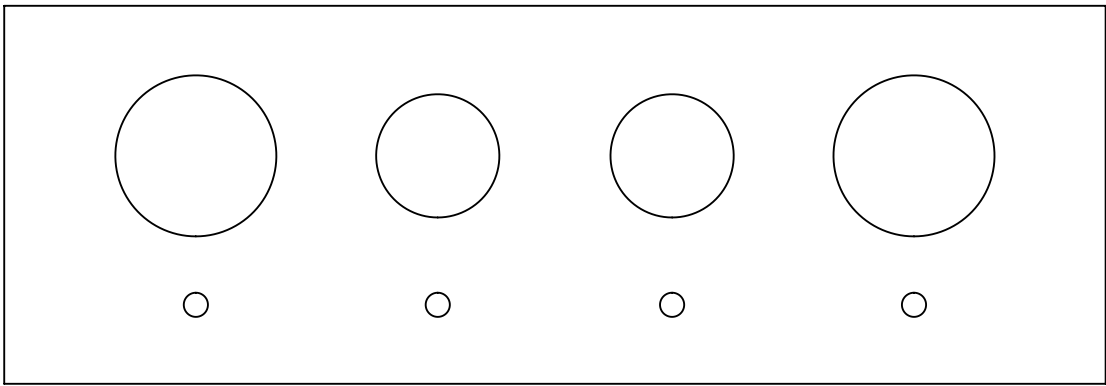

Worktop DETROIT TC0403

Caution:
All cut outs need to be
smooth inside.
The edges on top and
backside need at least a
2 mm bevel.

Worktop front edge

